

Electric Shears

The Full Pack Includes

- 1 x Electric Cutter Unit
- 1 x (A) Cutter Blade – General purpose / Aramid
- 1 x (B) Cutter Blade – General purpose
- 1 x Battery
- 1 x Plug Battery
- 1 x Power Adapter
- 1 x Charging Stand

*** Not included – Micro Serrated Blade (Can be bought separately)**

Use

Press the switch button on and use appropriately. Push the electric scissors and cut in a straight line or a curve in accordance with the lines. If you have any difficulty, please stop using immediately and review the points below. Please place the electric shears far away from children.

Warnings

The items being cut should not be too thick (please test separately). If the fabric is too thick it may reduce the life of the scissor blade or even cause the shears to burn out. WBT-1 Electric shears must be protected from moisture; they should only be used indoor. Avoid short circuit of the power adapter, charging stand, and the battery. Only the original parts can be used otherwise it may lead to a fire, an electric shock or personal injury. If the flexible wire of the power adapter is damaged only the manufacturer, maintenance centre or other qualified professional personnel should fix it. Burning the battery or throwing it in a fire is prohibited as it may lead to an explosion. Avoid charging the battery if it is leaking and avoid charging the non-rechargeable batteries. When in an environment with a high temperature or when over usage has taken place battery leakage may appear. If the fluid that leaked from the battery stains your skin you should first clean it with soap, and then rinse with lemon juice or vinegar. If it accidentally goes into the eyes, you should immediately rinse with clean water and go to the hospital for examination and treatment.

Important

When the battery is being charged, it is normal that the surface of the power adapter and battery may be too hot to touch. This charging stand and power adapter should be used together. Avoid using other power adapters or charging stands. After using the machine for a period of time the shear may be hot. If this occurs, please do not charge immediately, it must be charged after the battery has cooled. If you do not allow it to cool the life of the battery may be shortened or it may cause the battery to overheat when being charged.